


# GPON HGU with 4-Port GbE, 1200Mbps 802.11ac Wireless and 2-Port FXS

## GPN-400ACV

### 1. Package Contents

Thank you for choosing PLANET GPN-400ACV. Before installing the router, please verify the following items in the package box.

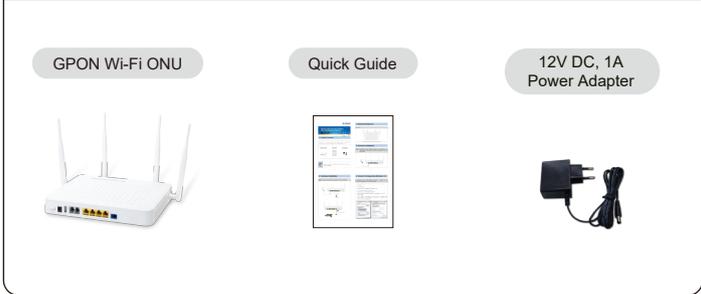

**Note** If there is any item missing or damaged, please contact the seller immediately.


## 2. Hardware Introduction

Front View




## 3. Hardware Installation

**Step 1:** Connect the Power Adapter provided in the package to the GPN-400ACV. The Power LED on the front panel will turn on accordingly.

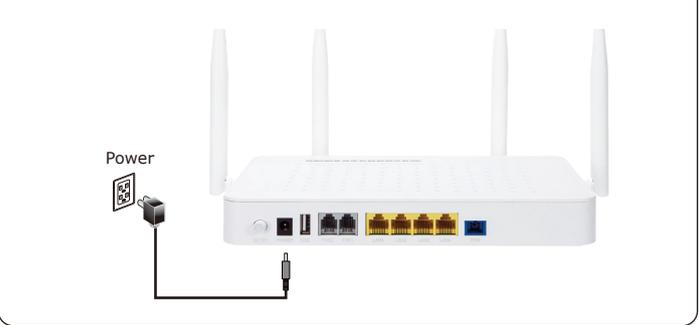

## 3. Hardware Installation


**Step 2:** Follow the figure below to connect the network devices.

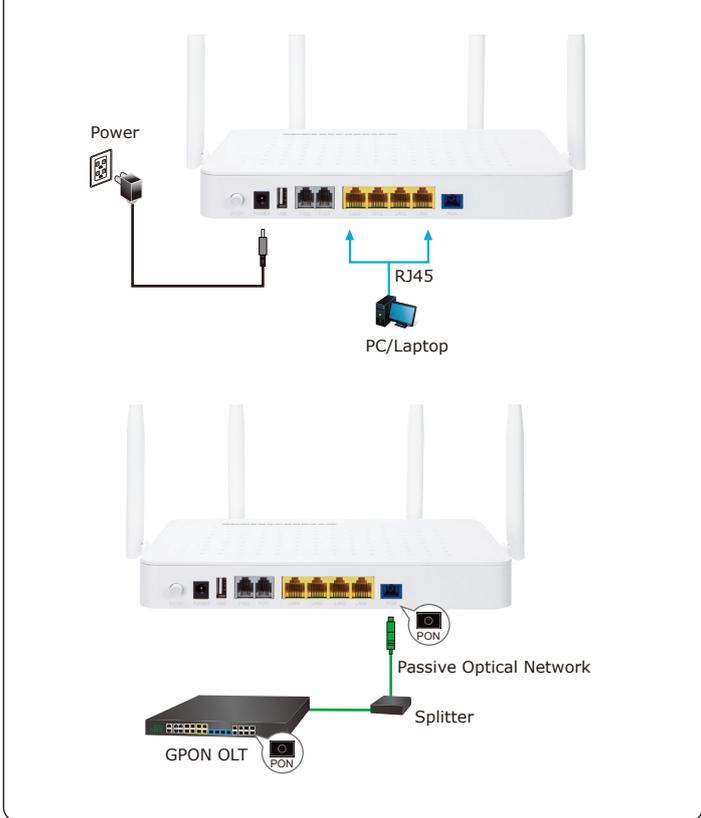

## 4. Network Configuration (Windows 10)

A computer with a wired Ethernet connection is required for the first-time configuration of the Wireless Router.

1. Click the **"Start"** button located at the lower-left corner of your computer.
2. Click **"Settings"**.
3. Double-click the **"Network & Internet"** icon.
4. Click **"Change Adapter Options"**.
5. Double-click **"Local Area Connection"**.
6. Select **"Internet Protocol Version 4 (TCP/IPv4)"** and click **"Properties"**.
7. Select **"Obtain an IP Address automatically"** and **"Obtain DNS Server Address automatically"**, and then click the **"OK"** button twice to save the configuration.

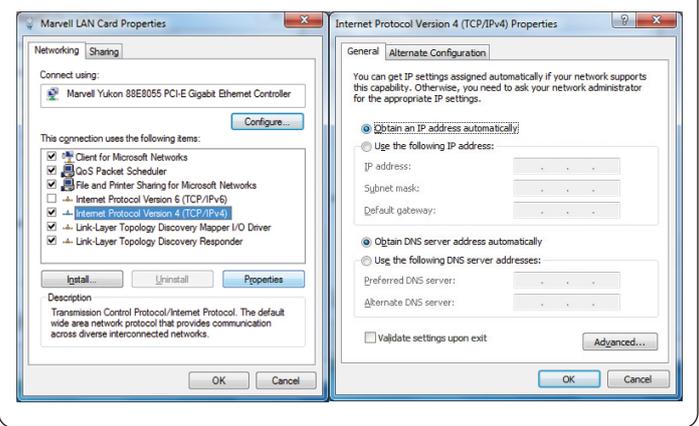

## 5. Enter into the Web Management

Default IP Address: **192.168.123.1**

Default User Name: **user**

Default Password: **123456**

Administrator User Name: **admin**

Administrator Password: **super&123**


Default 2.4G SSID: **2.4G\_XXXX**  
**("X" means the last 4 digits of the MAC address)**

Default Wireless Encryption Type: **XXXXXXXXXX**  
**(Please refer to the label info on the backplane)**

Default 2.4G SSID: **5G\_XXXX**  
**("X" means the last 4 digits of the MAC address)**

Default Wireless Encryption Type: **XXXXXXXXXX**  
**(Please refer to the label info on the backplane)**

 **Step 1:** The Web management allows you to access and manage the GPN-400ACV easily. Launch the Web browser and enter the default IP address <http://192.168.123.1>




- 5 -

**Step 2:** When you enter into the Web User Interface, please enter the User Name and Password in the login window. Then click the "Login" button to continue.




**Step 3:** After you enter into the Web User Interface, please follow the indications on the screen to quickly set up for the Internet connection.

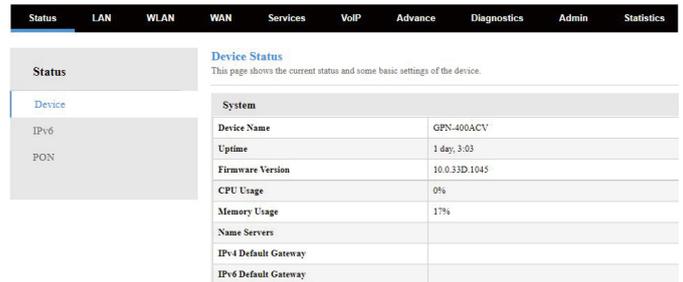


- 6 -

## 6. Wireless Network Connection

**Step 1:** Right-click on the **network icon** displayed in the system tray.

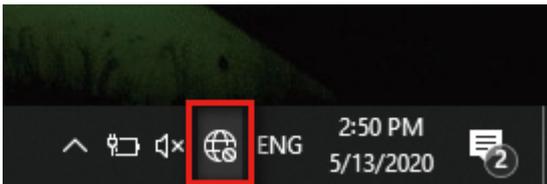

**Step 2:** Highlight the wireless network (SSID) to connect and click the [Connect] button.

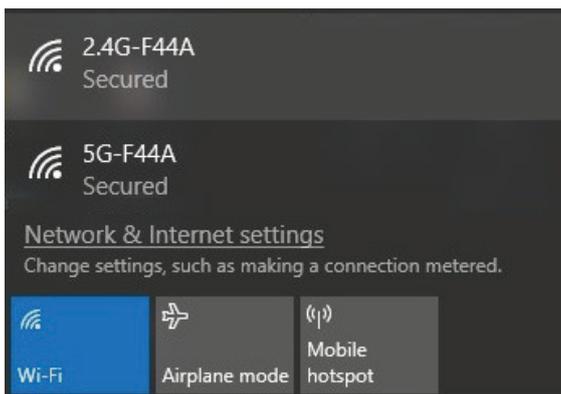


- 7 -

**Step 3:** Enter the **encryption key** of the GPN-400ACV.

Please refer to the label info on the backplane.

Default 2.4G Wifi SSID: 2.4G-XXXX  
 Default 2.4G Wifi Key: XXXXXXXX  
 Default 5G Wifi SSID: 5G-XXXX  
 Default 5G Wifi Key: XXXXXXXX

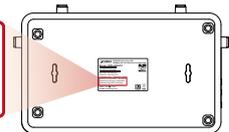

You have finally finished the configuration of the GPN-400ACV. Now you can use your smart phone, tablet, laptop or any other Wi-Fi device to connect with it wirelessly and start surfing the Internet.

## Further Information

The above steps show the simple installation and configuration of the GPN-400ACV. For further configurations of WAN, LAN, Firewall, VoIP, DMZ, and DDNS, please refer to the user manual which can be downloaded from the website.



<https://www.planet.com.tw/en/support/downloads?method=keyword&keyword=GPN-400ACV&view=3#list>

If you have further questions, please contact the local dealer or distributor where you purchased this product.

### PLANET Technology Corp.

10F., No 96, Minquan Rd., Xindian Dist.,  
 New Taipei City 231, Taiwan  
 2011-BA0220-001



- 8 -